

## Manual

### How to Programme your remote control ADYX TE4433H – FAAC TE4433H

- [How to program your new remote control:](#)

There are different methods for programming your new remote control

- [From the receiver:](#)

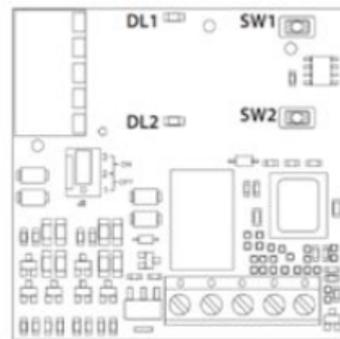


fig 2

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board (fig 2), press the programming button SW1. The receiver LED light illuminates (DL1). Let the button go.
3. Press a button on your new remote control. Keep it pressed down. The receiver LED light blinks twice.
4. Let the button on your new remote control go. Wait 10 seconds.
5. Your new remote control is programmed.

- [From the remote control that has already been programmed:](#)

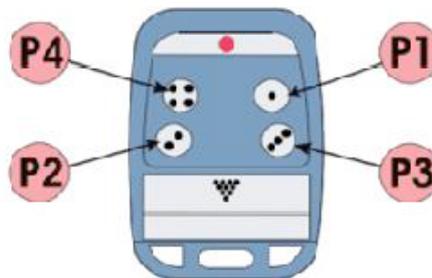


fig 1

1. Press the buttons P1 and P2 on the remote control that has already been programmed at the same time (fig 1). Keep them pressed down. Wait 5 seconds. Let the buttons go.
2. Press the same button you wish to program on the remote control that has already been programmed. Let the button go.
3. During the following 5 seconds, press the same button on your new remote control. Let it go.

4. Repeat this procedure for each button that you wish to program.
5. Wait 10 seconds.
6. Your new remote control is programmed.