


Manual

How to Programme your NEW REMOTE CONTROL DITEC GOL4-C

How to program your new remote control


There are 2 methods for programming your new remote control.

- From the receiver:

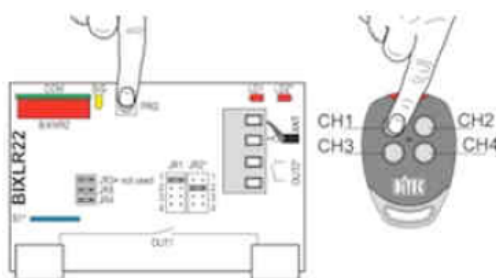

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button (PRG). The LED light on the receiver illuminates. Let the button go.
3. Press a button on your new remote control. Keep it pressed down. The LED light of the receiver blinks and then remains lit fixedly. Let the button go.
4. Your new remote control is programmed.

- From a remote control that has already been programmed:

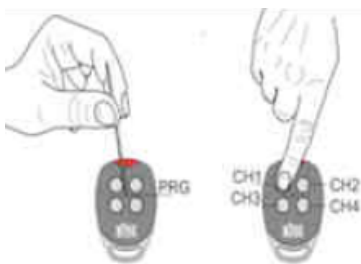

1. Press the top two buttons on your new remote control simultaneously for 5 seconds. The LED light on the remote control illuminates.
2. In the next ten seconds, take a DITEC GOL4C or BIXLS2 (older version) that has already been programmed (and that is already in use) and place the head of the remote control exactly in the middle of the four buttons on the new remote control (as shown in the figure). Press a button on the already-programmed remote control and keep it pressed down.
3. The LED light on the new remote control flashes three times.
4. Your new remote control is programmed.

- To erase your remote controls:

1. Press the programming button (PRG) on your receiver. Keep it pressed down. The LED light on the receiver illuminates.
2. To erase all your remote controls, press the button PRG again for 3 seconds.
3. To erase only one remote control, press the buttons you use on your remote control.
4. The LED light on the receiver blinks fast.
5. The remote controls are erased.