

Manual

How to Programme your NEW REMOTE CONTROL ECOSTAR 40 - RSC2 - RSZ1

- [How to program your new remote control:](#)

1. Press the transparent button located under the ECOSTAR motor. The LED light on the motor blinks slowly. Let the button go.
2. During the following 10 seconds, press a button on your new remote control.
3. The LED light on the motor blinks faster. Let the button go.
4. Press the same button on your new remote control. Keep it pressed down.
5. The LED light on the motor blinks very fast. Let the button go.
6. Your new remote control is programmed.

ATTENTION : You can program only 6 RSE2 remote controls with the ECOSTAR motor
To erase all your remote controls:

1. Press the transparent button P located under the ECOSTAR motor. Keep it pressed down.
2. Wait 5 seconds. Let the button go.
3. The LED light on the receiver blinks slowly for 1 second, then faster for 4 seconds and then very fast for 2 seconds.
4. All the remote controls are erased.