

Manual

How to Programme your NEW REMOTE CONTROL HÖRMANN HSM4 - HSE2 - HSP4 - HSD2 – FIT - HSZ2

Remark:

- The coding process will incite the opening of your garage door. To avoid an accident, we recommend that you program your remote control while inside your garage.

How to program your new remote control:

There are several methods for programming your new remote control

- [Remote-to-remote programming:](#)



ATTENTION: During the coding process, if you press one of the buttons of the new remote control first, you run the risk of erasing the codes of all of the remote controls that have already been programmed

1. Place an already-programmed remote control next to the new remote control so they touch as shown in the diagram above (fig 1).
2. Press a button on your already-programmed remote control.
3. While keeping the button on your already-programmed remote control pressed down, press the same button on your new remote control. Keep it pressed down. The LED light on your new remote control blinks slowly. Wait 5 seconds. The LED light on your new remote control blinks faster.
4. Let the buttons go.
5. Repeat this procedure for each button you wish to program.
6. Wait 10 seconds.
7. Your new remote control is programmed.

- [Receiver-based programming:](#)



ATTENTION: Only use this method if you currently do not have any more functional remote controls. This programming method erases all the remote controls that have already been programmed.

1. Approach your receiver. It is located next to your motor.
2. On the receiver, press the programming button P (fig 2). The LED light on the receiver blinks slowly. Let the button go.
3. Press the button you wish to program on your new remote control. Keep it pressed down. The LED light on the receiver blinks faster and then turns off. Let the button go.
4. Wait 10 seconds.
5. Your new remote control is programmed.

- [Programing of your new Hörmann HSM4 remote control from a Hörmann DH remote control that has already been programmed:](#)

1°	2°	3°	4°	5°	6°	7°	8°	9°	10°

1. Open the casing of your already-programmed remote control.
2. On the receiver circuit board, you will see a row of 10 small programmable switches, numbered 1 to 10. They are in the ON or OFF position. The positioning of these small programmable switches determines the system programming code. Please make a note of these positions in the following table:
3. Open the casing of your new remote control. Press the red button located above the battery. The LED light on your new remote control illuminates.
4. Enter your programming code in the following manner:
 - The top button of the remote control corresponds to the ON position of the internal programmable switches
 - The bottom button of the remote control corresponds to the OFF position of the internal programmable switches
5. As you set the position of the last switch, the LED light on your new remote control blinks.
6. Your new remote control is programmed.