

Your new remote control Programming Instructions

*NICE Plano 1 – Plano 4 – Ergo 1 – Ergo 4 – Flo 1R – Flo 2R –
Flo 4R - BT 1K - BT 2K – BT 4K – One 1 – One 2 – One 4 – One
9 – Very VR – Way 1 – Way 3*

How to Program your new remote control:

There are two methods for programming your new remote control;

- Remote-to-remote programming:

1. Approach your motor so you are standing a few feet away of it.
2. Press a button on your new remote control for 5 seconds.
3. Slowly press times a button on your already-programmed remote control while waiting one second between each press. Each press lasts one second.
4. Press a button on your new remote control. Let it go
5. Wait 10 seconds.
6. Your new remote control is programmed.

- Receiver-based programming:



1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button (diagram above, B1). Keep it pressed down. The LED light on the receiver illuminates. Let the button go.
3. Press a button on your new remote control. Let it go. The LED light on the receiver turns off.
4. Wait 1 second. Press the same button on your new remote control. Let it go. The LED light on the receiver blinks three times.
5. Wait 10 seconds.
6. Your new remote control is programmed.