


## Manual

### *How to Programme your REMOTE NICE Plano 6 - Ergo 6*

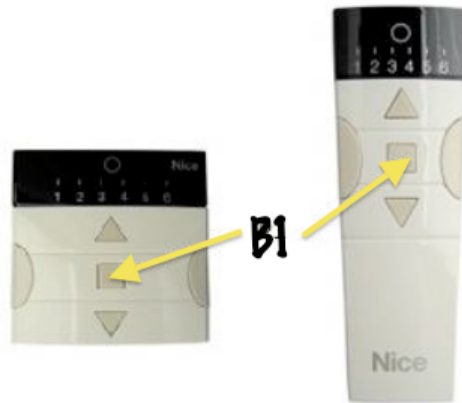

Your remote contains a row of mini switches.

In order for your remote to work, you must programme it by following these steps:

1. Open the casing of an old remote, or one that currently works on your gate or garage door. For example, that could belong to one of your neighbours or your warden or caretaker.
2. Open the casing of your new remote.
3. Ensure that the switches on your new remote are in the same positions as on the old remote (reproduce the exact combination of switches). You can do this using any object with a fine point, such as a pen or screwdriver. Attention: some remotes have one or two extra switches, separated from the main row. These switches should also be in the same position as on the old remote.
4. Close the remotes.
5. Verify that your new remote works correctly.

Note:

If you do not have an old remote, you can open the box containing the receiver, as it also contains the same switches, in the same position as the remotes. Just reproduce that combination on the remote.