


Yo
fu
F

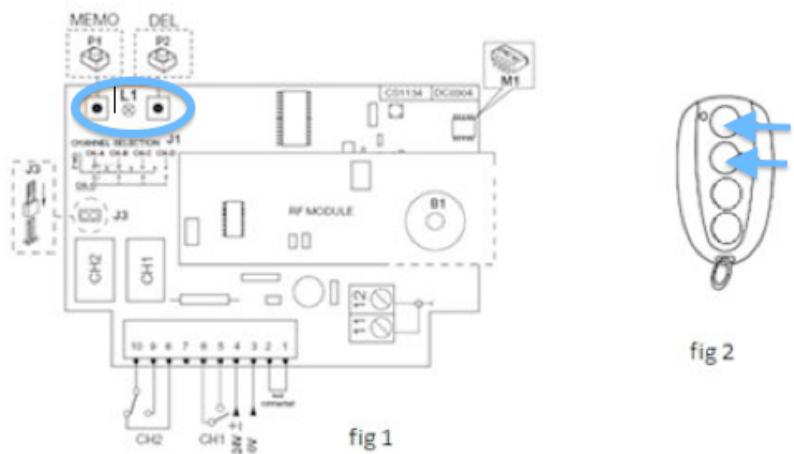

How to program your new remote control:

There are two different methods for programming your new remote control

Remote-to-remote programming:

1. Approach your motor so you are standing a few feet away from it.
2. Press both top buttons on your remote control that has already been programmed at the same time (fig 1). The LED light on your remote control that has already been programmed illuminates, turns off and then illuminates again. Let the buttons go.
3. Immediately press the two top buttons on your already-programmed remote control at the same time. Keep them pressed down. The LED light on your already-programmed remote control blinks slowly and then turns off. Let the buttons go.
4. During the following 10 seconds, press the button you wish to program on your new remote control for 5 seconds. Let it go.
5. Wait 10 seconds.
6. Your new remote control is programmed.

Receiver-based programming:

ATTENTION: if you keep the programming button of your receiver pressed down too long, you will erase the programming code of all of your remote controls that have already been programmed

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button MEMO (fig 1) until the LED light on the receiver illuminates.
3. Press the button you wish to program on your new remote control. Keep it pressed down. The LED light on the receiver blinks and then remains lit constantly.
4. Let the button go.
5. The LED light on the receiver blinks and then turns off.
6. Wait 10 seconds.
7. Your new remote control is programmed.