

Your Programming Instructions for your new remote control SOMFY Mitto RTR - PROEM ER2C4ACS – PROEM ER4C4ACS

 
The programming method depends on the gate you own

On a PASSEO 520 /550 /570 /600 /630 /650 gate



- 1. Pose your new remote control on the target graved on the hood of your receiver. It is located next to your motor.*
- 2. Press the button you wish to program on your new remote control. Keep it pressed down. The LED light on the receiver blinks. Let the button go.*
- 3. Wait 10 seconds.*
- 4. Your new remote control is programmed.*


On a PASSEO 400 /500 /S200 /230 /400 /524 gate

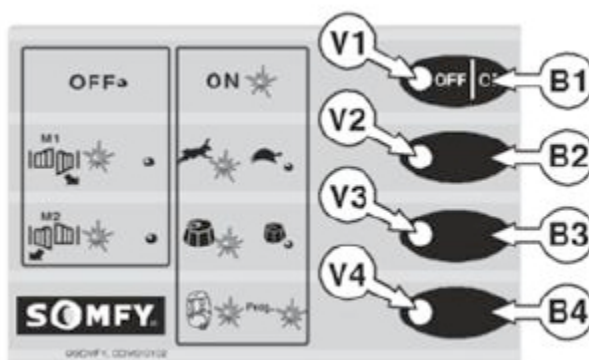

- 1. Approach your control panel (diagram above).*
- 2. Check that the button B1 is in the ON position and that the LED light V1 illuminates.*
- 3. Press the button you wish to program on your new remote control. Keep it pressed down. The LED light V4 blinks.*
- 4. While keeping the button on your new remote control pressed down, press the button B4. Keep it pressed down as well. The LED light V4 blinks and then remains lit constantly.*
- 5. Let the buttons go.*
- 6. Wait 10 seconds.*
- 7. Your new remote control is programmed.*


Programming Instruction

 On a KEASY 5/10 – SLD5000/7000 – LS 8900 gate

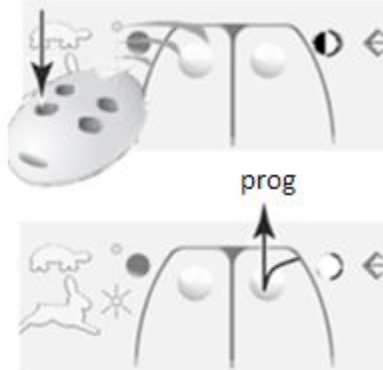

1. Open the casing of your receiver. It is located next to your motor.
2. Press a button on your new remote control. Keep it pressed down. The LED light on your new remote control blinks.
3. On the receiver circuit board, press the programming button while keeping the button on your new remote control pressed down. Let the buttons go. The LED light on your new remote control remains lit constantly.
4. Wait 10 seconds.
5. Your new remote control is programmed.

 As a replacement for a SIMINOR 433 NLT2 or 4 remote control

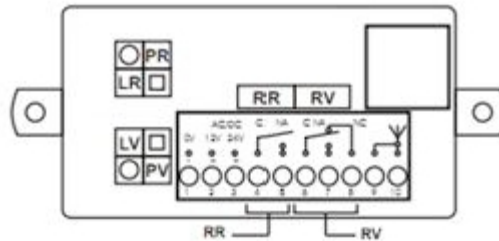

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board (diagram above), press the programming button PR. Keep it pressed down. The LED light on the receiver illuminates (LR). Let the button go.
3. Press the button on your new remote control. Keep it pressed down. The LED light on the receiver blinks. Let the button go.
4. Wait 10 seconds.
5. Your new remote control is programmed.

Remark:

You can perform this last operation with the button PV and the LED light LV.