


Manual

How to Programme your SOMMER 4020 – SOMMER 4026 – SOMMER 4031 - APERTO TX02 – APERTO TX03

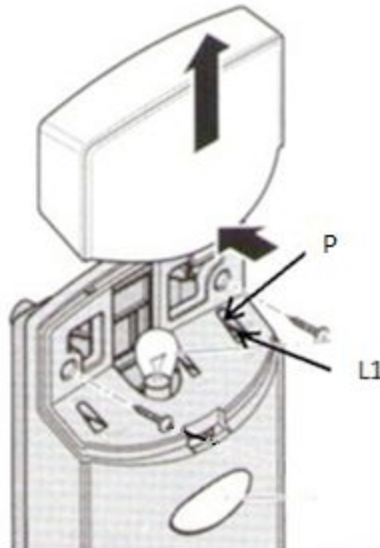

Programming of your new remote control:

ATTENTION: if you keep the programming button of your receiver pressed down too long, you will erase the programming code of all of your remote controls that have already been programmed

1. Open the casing of your receiver (diagram above). It is located next to your motor.
2. On the receiver, press the programming button P. The LED light L1 on the receiver illuminates. Let the button P go.
3. During the following 5 seconds, press the button you wish to program on your new remote control for 2 seconds. Let it go.
4. Repeat this procedure for each button you wish to program.
5. Wait 10 seconds.
6. Your new remote control is programmed.