




HSM2 868 MHZ/ HSM4/ HS4/ HSM2/ HSD2 BS/ HS5 BS/ HSP4/ HSZ 1/ HSZ 2/ ECOSTAR RSZ1

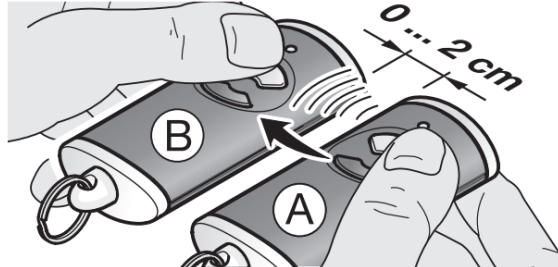

1. Press the button on remote control A, (the old remote control) and keep the button pressed
2. The radio code is transmitted and the LED is on (blue) for 2 seconds then goes out.
3. After 5 seconds, the LED flashes in red and blue, the radio code is transmitted.
4. Place the hand transmitter B close to the old one (at a maximum distance of 2 cm) and press the button you want to program (while still holding the button of the old transmitter)
5. Wait until the LED flashes slowly in blue
6. Your new remote control is programmed when you notice that the blue LED flashes quickly
7. Release the buttons on both remotes

NOTE: Repeat the same procedure to program the second button

Programming from a Hormann old model (with blue buttons):

1. Press the button on the old model then press the button on the new transmitter
2. The LED on your new remote will flash slowly then faster
3. When the led goes out, your new remote control is programmed.