



APRIMATIC TX2M – TX4M – TR2 – TR4



Programming with the Receiver:

1. Open the casing of your receiver. (It is located next to your motor.)
2. On the receiver circuit board, press the programming button (B1). The LED light of the receiver is flashing.
3. Press the button 1 on your new remote control for 2 seconds. Repeat the operation with all your new remotes.
4. Wait 15 seconds. The receiver LED light turns off.
5. Your new remote control is programmed.



Programming with your original remote control: (must be in perfect working order)

1. Position yourself near the radio receiver
2. Press all the buttons on your already programmed remote control; release them when the receiver emits a continuous beep
3. Press all the buttons on your new remote control. Release them.
4. The beep stops. Wait 2 seconds. The beep starts back up.
5. Wait 10 seconds. The beep stops.
6. Your new remote control is programmed.