




How to Programme your REMOTE HR RQ2640 - AQ2640 - R433 - A433 - R868 - A868

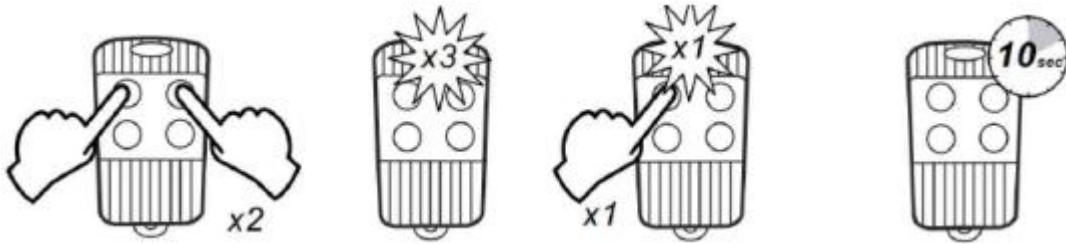

Remote-to-remote programming:

1. First, remove the protective cover from the battery.
2. Press simultaneously the buttons above on the new remote control. Release the buttons.
3. Press again simultaneously on the two buttons above on the new remote. The light on the new remote flashes quickly. Release the buttons.
4. Press the button you want to use. The LED light on the new remote will flash once. Release the button.
5. Place the new remote and the original remote control "back to back".
6. Press the button you wish to copy on the remote control in use.
7. The LED light on the new remote starts to flash quickly, after a few seconds the LED blinks slowly.
8. .Release the button on the original remote.
9. Wait a few seconds, the new remote control will blink once.
10. Your new remote control is now programmed.

Please note: You can program the other buttons on your remote control with the same operation.