



### SEA HEAD



#### **Programming with your original remote control: (must be in perfect working order)**

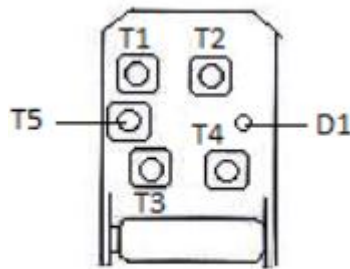


fig 1

1. Position yourself close to the radio receiver
2. Open the casing of your already-programmed remote control.
3. Press the button T5 for 1 second (fig 1). The LED light D1 on your already-programmed remote control flashes and then turns off.
4. Release the button T5
5. Wait 5 seconds then press the button you wish to program on your new remote control. Release it.
6. Repeat this procedure for each button you wish to program.
7. Wait 10 seconds.
8. Your new remote control is programmed.

## Programming with the Receiver:

**IMPORTANT:** : If you press the button of your receiver for too long, the programming code of all of your remote controls that are stored in the receiver will be deleted.

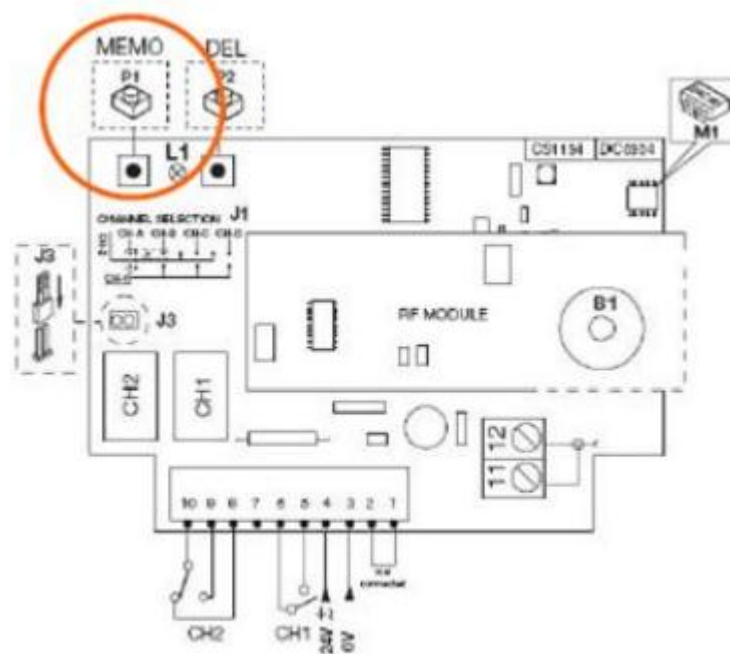


fig 1

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button P1 (fig 1). The LED light on the receiver is flashing. Release the button.
3. During the following 10 seconds, press a button on your new remote control. Release it.
4. Wait 10 seconds.
5. Your new remote control is programmed