


SOMMER 4004 – 4050

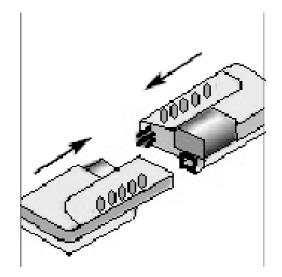


Remote-to-remote programming:

- 1. Open both remote controls by their sides and connect the two fobs
- 2. When the LEDs light up and then go off, press the button 1 on the new remote control and hold it down
- 3. When The LED of your old remote control comes off, press and hold the second button until the LED switches off.
- 4. Your new remote control is programmed!

Visit our Website. www.alloremotecontrol.com

Receiver-based programming:

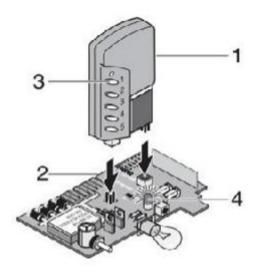

- 1. Disconnect your receiver. It is located next to your motor.
- 2. Open the casing of your receiver
- On the receiver circuit board (2), connect the remote control as indicated in the diagram above (1). The LED on the receiver lights up (4).
- Press the button you wish to program on your new remote control (3). Keep it pressed down. The LED light on the receiver turns off. Release the button.
- 5. Wait 10 seconds
- 6. Your new remote control is programmed