



ALLO
REMOTECONTROL

INSTRUCTIONS

WAYNE-DALTON Star-302 Star-304 S429-1 S429-2 S429-4 S425 S429-mini 433mhz Black

IMPORTANT INFORMATION:

- ✓ For a new transmitter, you must activate its security code before Programming
- ✓ Each new remote control has its own code; you should therefore register its code in the radio receiver.
- ✓ Pressing the program button (MEMO, ENR, REC, PROG ...) for more than 5 seconds erases all the remotes memorized in the receiver.

HOW TO REGISTER YOUR NEW REMOTE CONTROL?

Open the casing of the radio receiver (located at the end of the wire from the antenna)

1. Press the programming button on the radio receiver. Depending on the model, the button can be either ENR, MEMO, PROG, or REC, etc.
Note: On some receivers, you only have to press the programming button once and release it soon after. On other receivers, you must hold the programming button down.
2. A light on the receiver lights up, or flashes.
3. Press the button on your new remote for one second.
4. Release the button: the light on the receiver will go out either right away or after 10 seconds.
5. Make sure that your new remote is in good working order
6. Close the casing of the receiver.