


## **INSTRUCTIONS**

## BECKER EC541

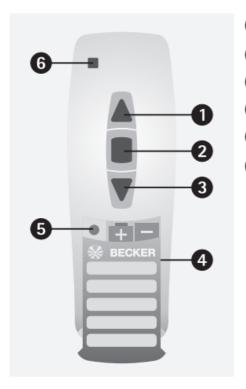

- 1 UP pushbutton
- 2 STOP pushbutton
- 3 DOWN pushbutton
- Battery compartment
- 5 Programming pushbutton
- 6 Transmission control light

## Put the receiver into learn mode:

- 1. Switch off the receiver's power supply and reconnect after 5 seconds OR activate the programming button on the radio-controlled receiver switch.
- 2. The receiver will be in 'learn' mode for 3 minutes

## • Learn master transmitter:

When the receiver is in 'Learn' mode, press the programming button until the receiver indicates that the learn process is completed.