




BECKER MC441

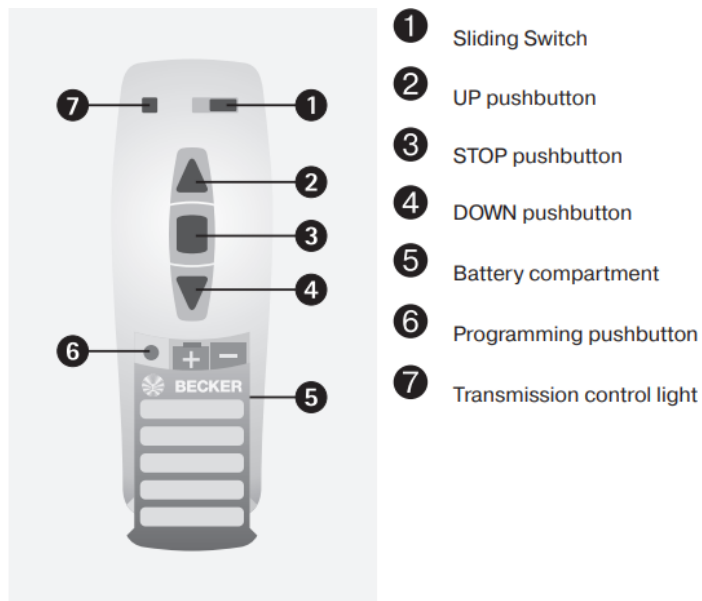

NOTE: Before entering this MC441 transmitter, make sure that a master transmitter has been already programmed into the receiver and the motor has learned the upper and lower stops.

- **Put the receiver into learn mode:**

1. Switch off the receiver's power supply and reconnect after 5 seconds OR activate the programming button on the radio-controlled receiver switch.
2. The receiver will be in 'learn' mode for 3 minutes

- **Learn master transmitter:**

When the receiver is in 'Learn' mode, press the programming button until the receiver indicates that the learn process is completed.