




### MARANTEC 371F-B

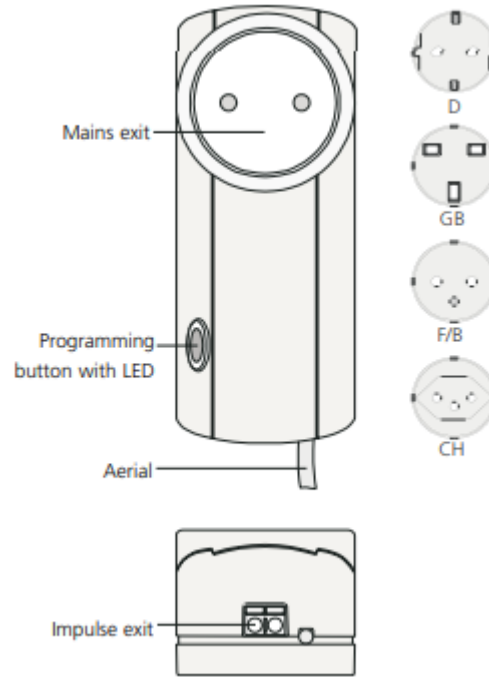

1. Plug the safety socket receiver into a safety socket.
2. Only for electric units connected to mains supply: Plug in the unit to be switched (e.g. garage door operator or lighting) to the mains exit of the safety socket receiver
3. Connect the impulse exit of the safety socket receiver to the connection of the external impulse button of the unit to be controlled
4. Transfer the coding of the channel buttons from the transmitter to the receiver

#### How to learn the transmitter?

1. Shortly press the programming button. The LED flashes for roughly 40 sec.
2. Actuate the transmitter button within these 40 sec.
3. As soon as the radio control has saved the transmitter code, the LED is on for roughly 4 seconds