



BFT T01, T02, T04 30.875Mhz

Open the remote control you normally use for operating your system.
Find the position of the dip switches



Open your new remote control and place the dip switches in the same position as the original remote control

