




CAME Top 302A / Top 304A

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, you will see a row of 10 small programmable switches, numbered 1 to 10. They are in the ON or OFF position

The positioning of these small programmable switches determines the system programming code.

	1	2	3	4	5	6	7	8	9	10
On	X	X	X	X	X					
Off						X	X	X	X	X



3. Open the casing of your new remote. You will see a row of 6 small programmable switches, numbered 1 to 6.
4. Put the programmable switch number 6 of your new remote control in the ON position.

Note: For 4 button models, position the switch 2 in the ON position

5. Enter your programming code in the following manner:

The left button of the remote control corresponds to the OFF position of the internal programmable switches - The right button of the remote control corresponds to the ON position of the internal programmable switches.

Note: for 4 button models, use the 2 upper buttons

Press 10 times the buttons of your new remote control (successively)