



DICKERT E17

Teaching in transmitter switches

MODE	Programming	“OUT” LED display
Impulse	Press set switch 1 x briefly Actuate the transmitter switch for 3 s	Flashes 1 x –pause- flashes 1 x... Flickers
Surge	Press set switch 2 x briefly Actuate the transmitter switch for 3 s.	Flashes 2 x –pause- flashes 1 x... Flickers
On	Press set switch 3 x briefly Actuate the transmitter switch for 3 s.	Flashes 3 x –pause- flashes 1 x... Flickers
Off	Press set switch 4 x briefly Actuate the transmitter switch for 3 s.	Flashes 4 x –pause- flashes 1 x... Flickers

Teaching in/ deleting “Auto-off” times:

The Auto-off time for each channel is set separately using the dip switches 1+2

Setting the dipswitches to the starting position deactivates the function.

For Auto-off, the operating modes “Surge” or “On” must be taught in

Channel 1 is to be set to switch off after 3 minutes. Dip switch 1 must be in the lower position. Switch on channel by radio. After 3 minutes, Set dip switch 1 to ON and leave it in this position. The channel switches off and the Auto off time has now been taught in. In the operating mode “ON”, the time can be reset by actuating the switch again. The channel can be switched off prematurely with “Impulse” “Surge” and “Off”

The time can be learnt in increments of 1 second, from 1 second to approx. 18 hours

Deleting codes:

Actuate a "SET" switch until the "OUT" LEDs switch from "flashing" to "off". All the taught in codes will be deleted. Individual codes cannot be deleted separately.

Visit our website: www.Alloremotecontrol.com