



### FAAC SLH



#### **Programming from an already activated remote control:**

1. Press both buttons on the working remote control until the light flashes
2. When the LED flashes, press and hold the button you normally use for operating your system
3. Put the remotes head to head and press and hold in the same button on the new remote control
4. The LED will flash 3 times and then goes out
5. Your new remote control is now programmed