



FAAC XR2 433C

- 1) On the SLH master radio control, simultaneously press and hold down push-buttons P1 and P2.
 - 2) The radio control LED begins to flash (for about 10 secs.).
 - 3) Release both push-buttons.
 - 4) Press, for 1 second, the push-button on the receiver relating to the channel you wish to associate with the radio control.
 - 5) The relevant LED on the receiver begins to flash slowly for 5 secs.
 - 6) Within these 5 secs while the radio control LED is still flashing, press and hold down the required push-button on the radio control (the radio control LED lights up on steady beam).
 - 7) The LED on the board lights up on steady beam for 1 second and then goes OFF, indicating that storage was executed.
 - 8) Release the radio control push-button.
 - 9) Quickly press twice in succession the memory stored radio control push-button
-
- 10) To add other radio controls, transfer the code of the memory-stored push-button of the radio control to the relevant push-button of the radio controls to be added:
 - a) On the memory stored radio control, simultaneously press and hold down push-buttons P1 and P2.
 - b) The radio control LED begins to flash.
 - c) Release both push-buttons.
 - d) Press the memory stored push-button and hold it down (the radio control LED lights up on steady beam).