




NICE K2M/K2M/K4M

Setting the code: Open the transmitter and set the 10 microswitches with the same combination as the receiver.

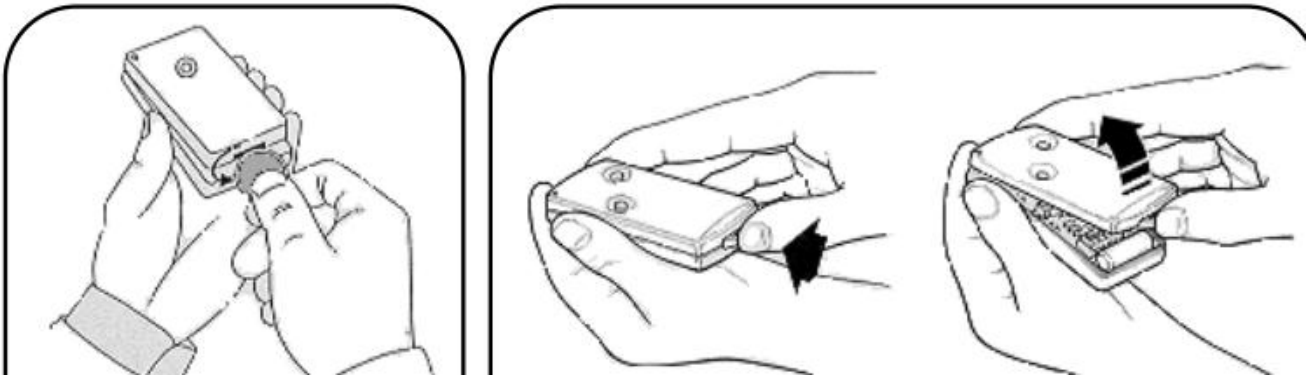

Associating the transmitter key - receiver output:

On transmitters K1-K2 K1M-K2M besides the 10 microswitches used for setting the code, there are additional microswitches that allow a receiver output to be associated with the transmitter keys



On transmitters K4 and K4M the association of key and output cannot be modified;

transmitters K2+2 (allow you to activate the OUT1 and OUT2 outputs of a receiver through keys T1 and T2, while the other two T1 and T2 keys can activate the OUT1 and OUT2 outputs of another receiver having a different digital code.