



### NOLOGO BANDY ONE

#### **BANDY-ONE has two ways of memorization: AUTOMATIC and MANUAL**

##### **AUTOMATIC:**

- Press and release the button 1 and then button no.4 and keep both pressed
- The led will be turned on once per time
- Release the buttons no.1 and no.4
- The led will be lit on for 5 seconds ( this is the memorization time)
- In 5 seconds press one of the buttons 1,2,3,4.
- Press and keep pressed the button of a compatible remote control
- The remote control checks the frequencies turning on the green or red or blue led.
- The blue led will flash regularly to confirm the operation

##### **MANUAL:**

This function is useful in case the automatic memorization is not possible. You have to memorize manually the frequency, SET UP the frequency. After follow these steps :

- Press and release the button 3 and then button no.2 and keep both pressed
- The led will be turned on once per time
- Release the buttons no.3 and no.2
- The led will be lit on for 5 seconds (this is the memorization time)
- In 5 seconds press one of the buttons 1,2,3,4.
- Press and keep pressed the button of a compatible remote control X,  
The distance can be changed according to the frequency of the original transmitter X.
- The blue led will flash regularly to confirm the operation.

##### **SET UP OF THE FREQUENCY**

BANDY-ONE can memorize a frequency in one or all buttons with following procedure:

- Press and keep pressed the buttons no.3 and no.4
- Now the red and green led starts flashing
- Wait until the red led is lit on, then release the buttons no.3 and no.4
- Press the button no.3 many times until you reach the frequency.
- To cancel the frequency press the button no.4 and then the button you previous memorized the frequency. If you want to memorize the same frequency in all buttons, keep pressed the button no. 4 until the blue led start flashing.