



**ALLO**  
REMOTECONTROL

INSTRUCTIONS

## SIMU TSA HZ4

1. Remove the back cover of your remote control
2. Open the memory of the motor
3. Take your individual control point remote control
4. Push the programming button of your remote control until the LED comes on on the front
5. Push the button you wish to program for your system
6. Your new remote control is now programmed!

Visit our Website: [www.alloremotecontrol.com](http://www.alloremotecontrol.com)