




SOMFY TELIS RTS

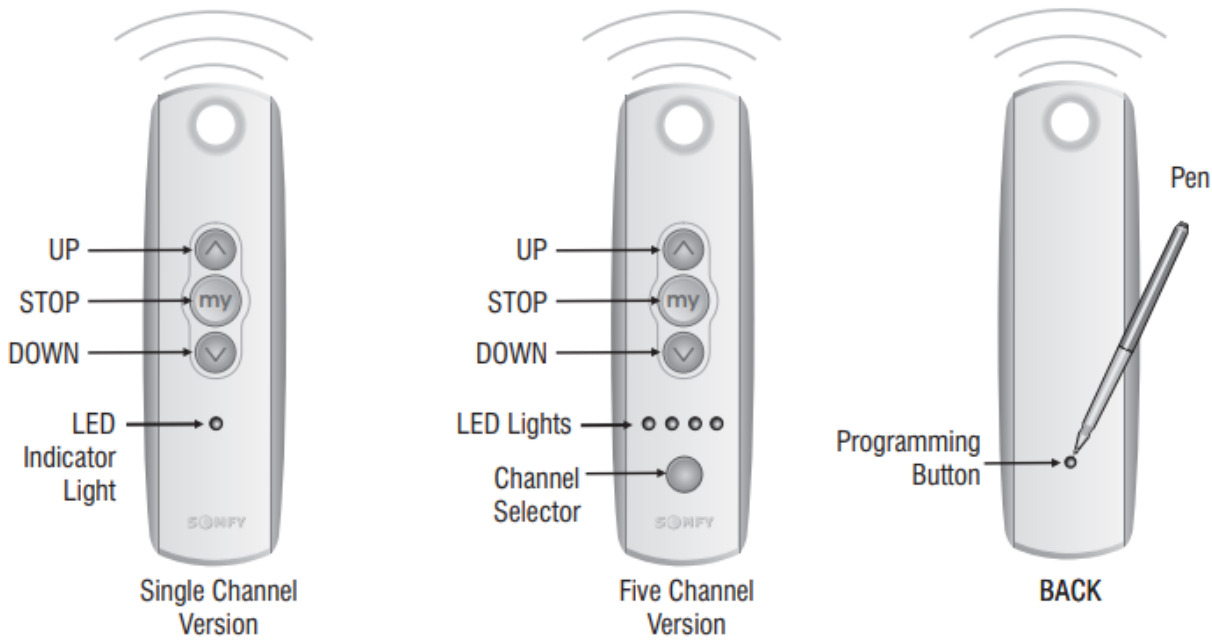

Adding a Telis 1 RTS Transmitter only:

Using the previously programmed Telis remote, press and hold the programming button on back of remote until window covering “jogs.”


Using the new Telis 1 remote, briefly press the programming button until the window covering “jogs.” Window covering has now learned the commands of the new Telis remote.

Adding a Telis 5 RTS Transmitter only:

Using the previously programmed Telis remote, press and hold the programming button on back of remote until window covering “jogs.”

Using the new Telis 5 remote, select the desired channel using the CHANNEL SELECTOR BUTTON. (The LED will illuminate each time the Channel Selector Button is pressed, indicating the selected channel)

Using the Telis 5 remote, briefly press the programming button until the motorized window covering “jogs”. The RTS motorized window covering has now learned the commands of the new Telis 5 remote.

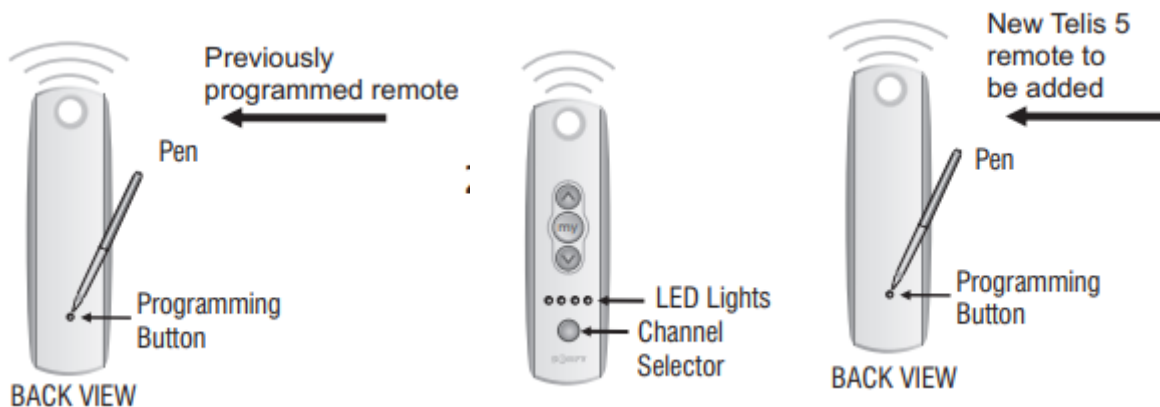

Setting a favourite position:

Telis 1 RTS Transmitter only:

Using the UP () or DOWN () Buttons, activate the window covering to a desired position, for example halfway Open or Closed. Briefly press the “MY” () (stop) Button to stop the window covering once position is reached.

Press and hold the “MY” () Button until the window covering “jogs.” Favorite position is now recorded.

Telis 5 RTS Transmitter only:

Using the Telis 5 remote, select the appropriate channel using the CHANNEL SELECTOR BUTTON. (The LED lights will illuminate each time the Channel Selector Button is pressed, indicating the selected channel)

Using the UP () or DOWN () Buttons, activate window covering to a desired position, for example halfway Open or Closed. Briefly press the “MY” () (stop) Button to stop the window covering once position is reached.

Favorite “MY” () position can be activated from any previous window covering position. Example: Briefly press the “MY”() button while window coverings in a Open or Closed position.

Note: Activating window covering to a Favorite position while already “in-motion” will require two brief presses of the “MY” (stop) button OR Window covering MUST BE in a stationary (Stopped) position before the “MY” favorite position can be activated.

OPERATING THE MOTORIZED WINDOW COVERING

Telis 1 RTS Transmitter only:

Use the UP () or DOWN () Buttons to open or close the window covering. If a specific position is necessary, briefly press the “MY” () (stop) Button to stop the window covering once position is reached.

Telis 5 RTS Transmitter only:

Using the Telis 5 remote, select the appropriate channel using the CHANNEL SELECTOR BUTTON. (The LED lights will illuminate each time the Channel Selector Button is pressed, indicating the selected channel)

Using the UP () or DOWN () Buttons to open or close the window covering. If a specific position is necessary, briefly press the “MY” (stop) () Button to stop the window covering once position is reached