




ALLMATIC BROSTAR/ B.RO WN/ B.RO OVER/ TECH 3/ B.RO WALL

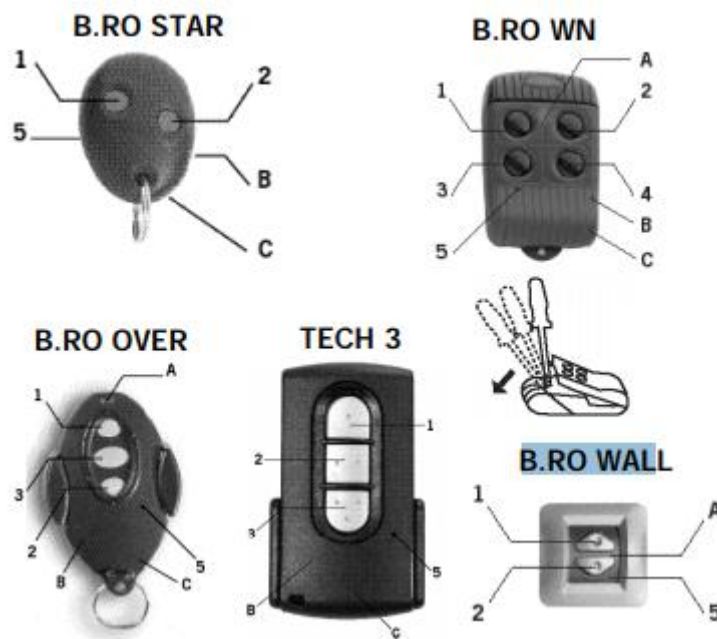

- A. Transmitter LED: this comes on steady during code transmission.
- B. Connector for programming the transmitter (to be used with B.RO PRO, B.RO BASIC and B.RO EPROG programmers only).
- C. Power battery.
- 1. Key 1.
- 2. Key 2.
- 3. Key 3.
- 4. Key 4
- 5. Hidden remote learning key (can be disabled with B.RO PRO, B.RO BASIC and B.RO EPROG programmers)

How to memorise the transmitter?

1. By means of a pointed object (example a paper clip) press the hidden key (n° 5) of the transmitter already previously learnt for about 1 second
2. For about 2 seconds, press the key of the transmitter to be learnt.

IMPORTANT: Remote learning is not recommended if, in the immediate vicinity, there are 2 or more receivers controlled by the same transmitter (for instance, key 1 learnt at first receiver and key 2 at the second receiver) because learning could be simultaneous

To open B.RO WN, press gently with a screwdriver, levering at the point indicated on the drawing. To close again, tighten the metal pieces against the battery, fasten in the rear part and lower this, being careful that the metal pieces are inwards.