





AVIDSEN 104250

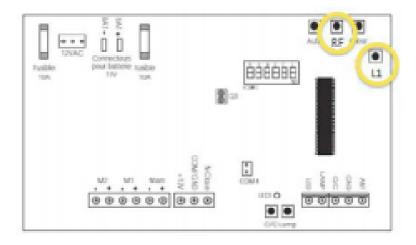

First type of receiver

- 1. Open the casing of your receiver. It is located next to your motor.
- 2. On the receiver circuit board, press the programming button (RF). Keep it pressed down. The receiver LED light comes on (L1). Release the button
- 3. Within the next 10 seconds, press a button on your new remote control, release it. The receiver LED blinks.
- 4. Wait 10 seconds.
- 5. Your new remote control is programmed.

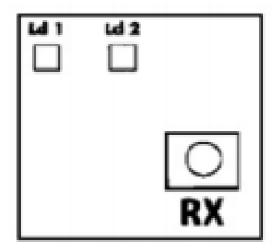

Visit our Website: www.alloremotecontrol.com

Second type of receiver:

- 1. Open the casing of your receiver. It is located next to your motor.
- 2. On the receiver circuit board, press the programming button (RX). Release the button. The receiver LED comes on. Wait 5 seconds. The receiver LED light turns off.
- 3. Press a button on your new remote control. Keep it pressed down. The receiver LED light turns on, Release the button
- 4. Wait 10 seconds.
- 5. Your new remote control is programmed