



ALLO
REMOTECONTROL

INSTRUCTIONS

Aprimatic TM4/ APRIMATIC TX4 E

1. Stand next to the gate or door system
2. Press all the buttons on your existing remote control
3. An audio beep starts from your gate or door system
4. Press all the buttons on your new remote control
5. Release them, then press one single button on your new remote control
6. Wait until the beeping stops
7. Your new remote control is now programmed

Visit our website: www.Alloremotecontrol.com