



BECKER TC4410

Switch off the power supply to the receiver for 5 seconds, then switch back on
Or operate the programming button the programming button or the radio switch of the receiver

The receiver is now in programming mode


Programming the master transmitter:

1. Press the programming button on the master transmitter while in programming mode until the receiver confirms that programming has been successful
2. The programming process is now complete

Programming additional transmitters:


1. Press the programming button of the master transmitter until the receiver confirms
2. Then press the programming button of the new transmitter until the receiver confirms
3. Press the programming button of the new transmitter again
4. The receiver confirms successful programming

MENU OVERVIEW

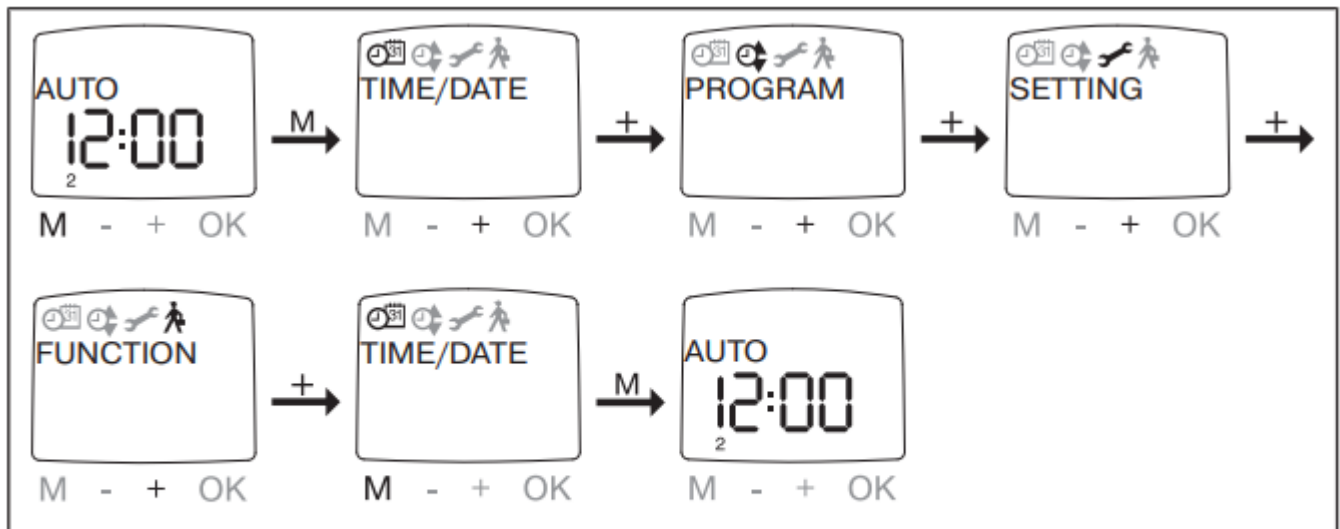


1. Press the MENU button, TIME/DATE appears.
2. To select additional menus, press the +/- buttons.
3. Press the MENU button to switch to Operating mode.

TIME/DATE (setting the time and date)

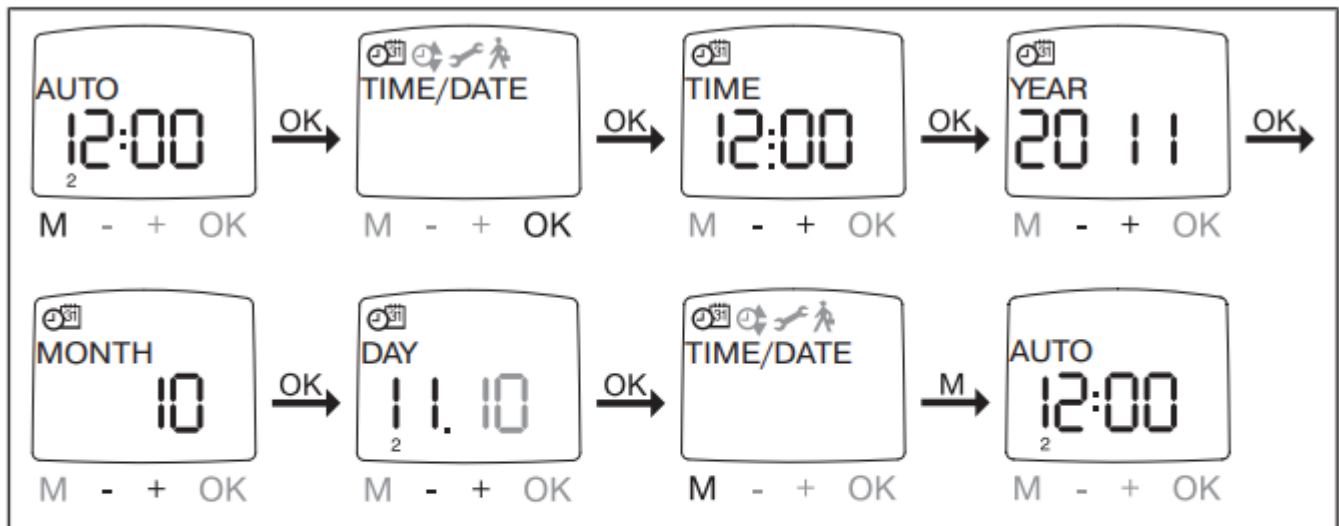

1. Press the MENU button, TIME/DATE appears.
2. Press OK to go to the Time menu item.
3. Now set the current time using the +/- buttons.
4. Once the time is set, confirm with OK.
5. To set the YEAR, MONTH and DAY, proceed as described above. TIME/DATE appears.
6. Press the MENU button to switch to Operating mode.


ASTRO EVENING (upward travel -> switching time, downward travel -> sunset)

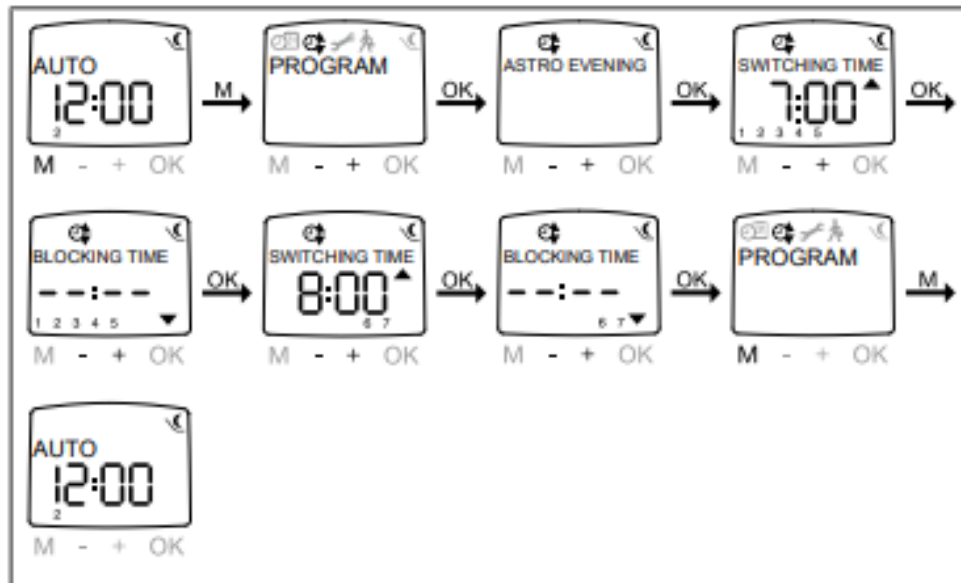

First select the desired channel in Operating mode using the channel selection button.

1. Press the MENU button.
2. To select the PROGRAM menu, press the + button until PROGRAM appears.
3. Confirm with OK.
4. Press the + button again until ASTRO EVENING appears.
5. Confirm with OK.
6. You now set the SWITCHING TIME ▲ from Monday–Friday (1–5) using the +/- buttons. Confirm each setting with OK.
7. You now set the BLOCKING TIME ▼ from Monday–Friday (1–5) using the +/- buttons. Confirm each setting with OK.
8. You now set the SWITCHING TIME ▲ for Saturday, Sunday (6,7) using the +/- buttons. Confirm each setting with OK.
9. You now set the BLOCKING TIME ▼ for Saturday, Sunday (6,7) using the +/- buttons. Confirm each setting with OK. PROGRAM appears.
10. Press the MENU button to switch to Operating mode.


INDIVIDUAL (upward/downward travel -> switching times)

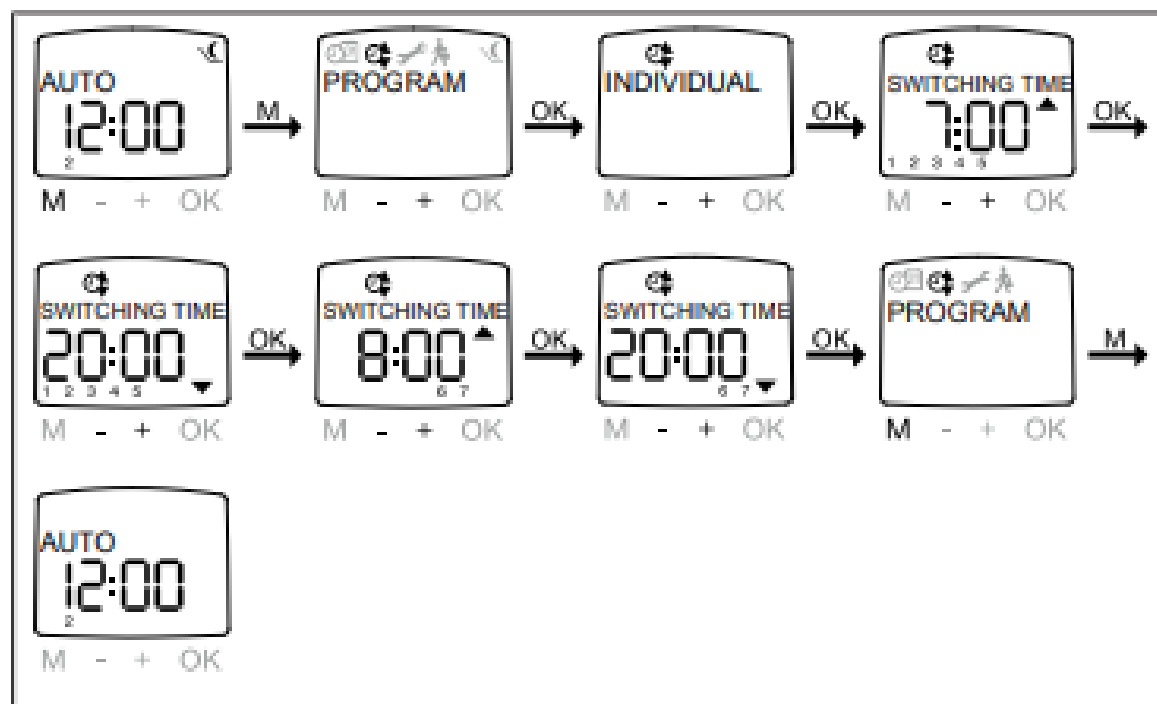

First select the desired channel in Operating mode using the channel selection button.

1. Press the MENU button.
2. To select the PROGRAM menu, press the + button until PROGRAM appears.
3. Confirm with OK.
4. Press the + button again until INDIVIDUAL appears.
5. Confirm with OK.
6. You now adjust the SWITCHING TIME ▲ and the SWITCHING TIME ▼ from Monday–Friday (1–5) and Saturday, Sunday (6,7) using the +/- buttons. Confirm each setting with OK.
7. Press the MENU button to switch to Operating mode.

HOLIDAY (Holiday OFF/ON)

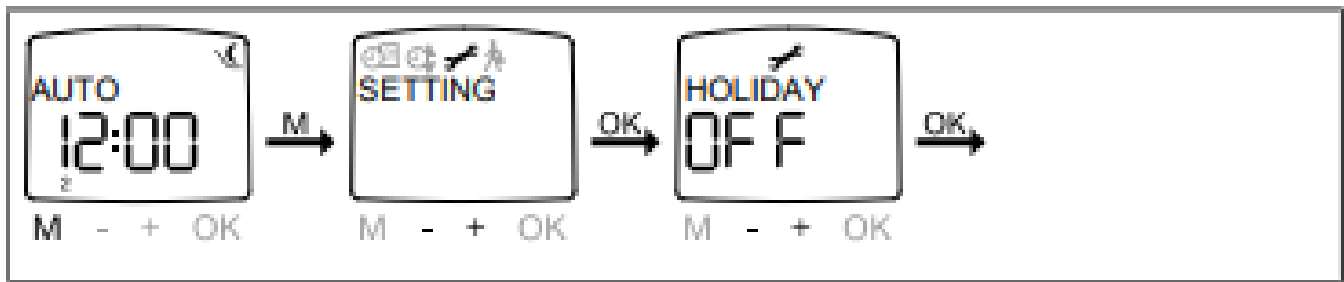


The settings apply to all channels.

1. Press the MENU button.
2. To select the SETTING menu, press the + button until SETTING appears.
3. Confirm with OK. HOLIDAY ON/OFF appears.
4. You can switch the holiday function to ON or OFF using the +/- buttons.
5. Confirm your selection with OK.
6. The HOLIDAY function is now set.
7. For details on further programming in the SETTING menu, please continue reading.

INTERMEDIATE POSITION, VENTILATION/TILT, Prog END POSITION (time/position programming)



First select the desired channel in Operating mode using the channel selection button.

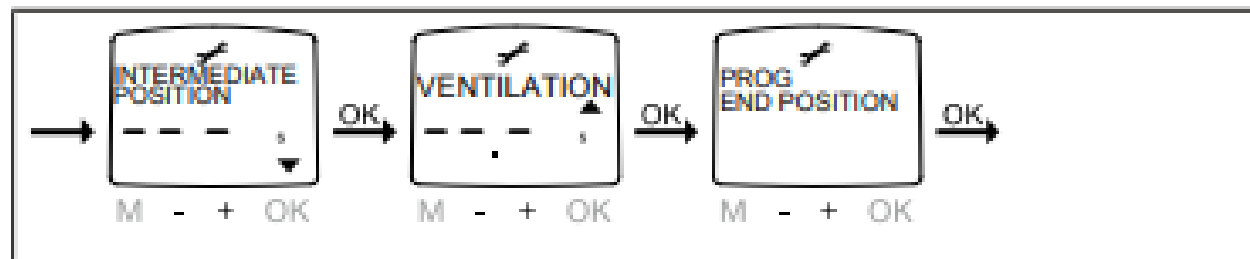


1. You have confirmed the HOLIDAY function. INTERMEDIATE POSITION appears.
2. You can set the INTERMEDIATE POSITION running time using the +/- button. The running time is given in seconds or you move to the INTERMEDIATE POSITION from the upper limit position using the UP/DOWN button.
3. Confirm with OK. VENTILATION/TILT appears.
4. You can set the VENTILATION/TILT running time using the +/- button. The running time is given in seconds or you move to VENTILATION/TILT from the lower limit position using the UP/DOWN button.
5. You have confirmed the VENTILATION/TILT menu item. PROG END POSITION appears.
6. You can choose between PROG END POSITION, PROG INTERM POS and PROG VENT/TILT using the +/- button.



Your selection determines which position the shading solution moves to from the upper limit position at the set switching time. Ventilation/tilt is only started once the relevant running time has elapsed.

7. Confirm your selection with OK.
8. The PROG END POSITION function is now set.
9. For details on further programming in the SETTING menu, please continue reading.

ENGLISH/ASTRO SHIFT ▼ (Language selection, Astro shift)

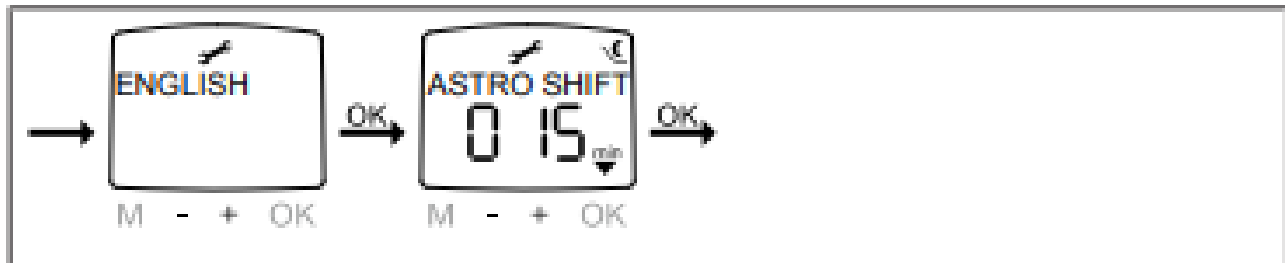

The settings apply to all channels.

1. You have confirmed the PROG END POSITION function. ENGLISH appears.
2. You can set the desired language using the +/- button.
3. Confirm your language selection with OK.
4. ASTRO SHIFT ▼ appears.
5. You can set the desired Astro shift ▼ using the +/- button (max. +/- 120 min.)
6. Confirm with OK.
7. The ASTRO SHIFT function ▼ is now set.
8. For details on further programming in the SETTING menu, please continue reading.

(City selection, EXPERT MODE (LONGITUDE, LATITUDE, TIME ZONE))



The settings apply to all channels.


1. You have confirmed the ASTRO SHIFT function ▼. City selection (LONDON) appears.
2. You can set the nearest city using the +/- button.
3. Confirm with OK.



This interactive window only appears if EXPERT MODE is set to ON in the Function menu.

4. LONGITUDE appears. (If you want to determine your location more precisely, you can set it using degrees of latitude and longitude.)
5. You can set the desired degree of LONGitude using the +/- button.
6. Confirm with OK. LATITUDE appears.
7. You can set the desired degree of LATitude using the +/- button.
8. Confirm with OK. TIME ZONE appears.
9. You can set your TIME ZONE using the +/- buttons. Confirm with OK.
10. The TIME ZONE function is now set.
11. For details on further programming in the SETTING menu, please continue reading.


SUMMER/WINTER (Automatic summer/winter time adjustment)

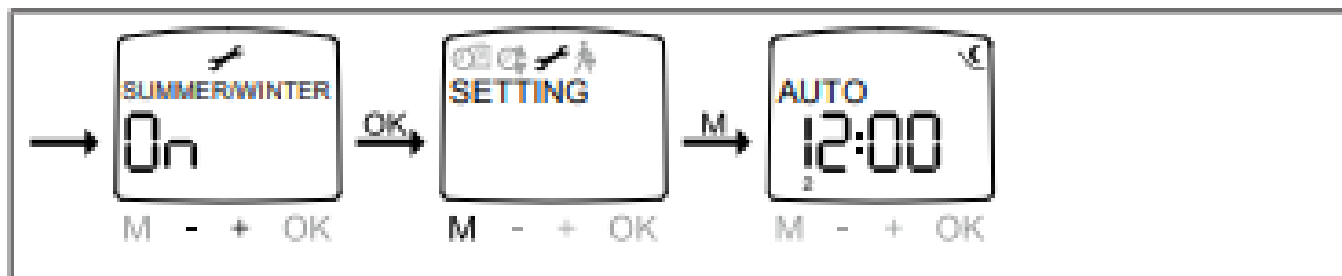

The settings apply to all channels.

1. You have confirmed the TIME ZONE function. SUMMER/WINTER appears.
2. You can turn SUMMER/WINTER on or off using the +/- buttons.
3. Confirm your selection with OK.
4. Press the MENU button to switch to Operating mode.

ROLLER SHUTTER/VENETIAN BLIND, INITIAL OPERATION (Selection of the shading solution, date of initial operation)

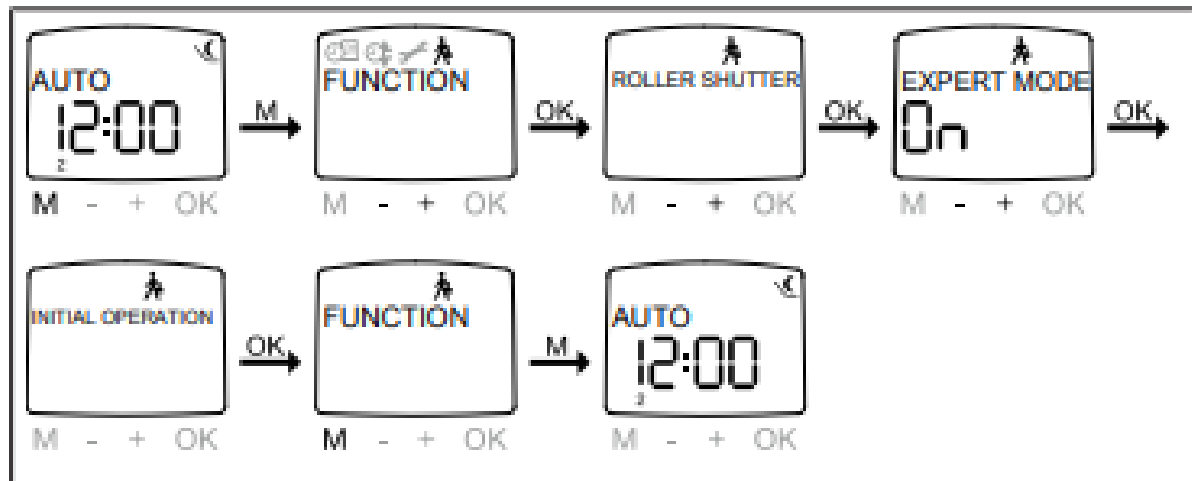

1. Press the MENU button.
2. To select the FUNCTION menu, press the + button until FUNCTION appears.
3. Confirm with OK. ROLLER SHUTTER/VENETIAN BLIND appears.
4. You can choose between roller shutter/venetian blind using the +/- buttons.
5. Confirm with OK. EXPERT MODE OFF/ON appears.
6. You can select the desired setting using the +/- buttons.
7. Confirm your selection with OK. INITIAL OPERATION appears.
8. Confirm with OK. FUNCTION appears.
9. Press the MENU button to switch to Operating mode.