



**ALLO**  
REMOTECONTROL

INSTRUCTIONS

## CAME TAM 432SA/ CAME T432A

1. Press the 2 keys together until the LED starts flashing more quickly
2. Then press the key to activate (the LED comes on)
3. Within 10 seconds, place the master transmitter on ; its back and press the key to duplicate for a few seconds
4. After saving, the LED will flash 3 times and the transmitter will be ready for use.
5. For another key, repeat the same procedure.

Visit our website: [www.Alloremotecontrol.com](http://www.Alloremotecontrol.com)