



ALLO
REMOTECONTROL

INSTRUCTIONS

DICKERT MAHS27/40

So that the transmitter and receiver "understand" each other, the code must be set as follows:

- Remove the battery cover by sliding it in the direction of the keyring tab.
- Set your personal code at the coding switch using a ballpoint pen or similar.
- Close the battery cover. - Set the code in the receiver.

Carry out the learning process as described in the receiver operating instructions.

Visit our website : www.alloremotecontrol.com