

## **GENIUS KILO**

- 1. Take your working remote control and press and hold both buttons together until the light starts to flash
- 2. While the light is flashing, press and hold the button you normally use to operate your gate or door
- 3. Place your new remote control nose to nose with the working remote and press the button you wish to program
- 4. The LED emits 3 flashes
- 5. Your new remote control is now programmed