



ALLO
REMOTECONTROL

INSTRUCTIONS

JCM NEO

First, check if your receiver or control panel has the "PIN-MODE" sticker Then follow the instructions in each case.(*)

Fast programming "PIN-MODE"

- 1 Position yourself about 2-4 metres away from the receiver.
- 2 Press the button on the back of the transmitter that you want to program with the tip of a ballpoint pen. The receiver will emit a long beep and your transmitter will be programmed.

If your receiver/control panel doesn't hold the "PIN-MODE" sticker and if you already have an operating transmitter, you can programme others by following these instructions:(*)

Standard programmation:

- 1 Position yourself about 2-4 metres away from the receiver, with the already operating transmitter (A) and the new one you wish to reprogramme (B).
- 2 Press the button on the back of transmitter (A) with the tip of a ballpoint pen. The receiver will emit a long beep.
- 3 Within 10 seconds, press the button of transmitter (B) selected for the function which you are programming. The receiver will emit a short beep to confirm the programming.
- 4 After 10 seconds, the receiver will leave the programming with two short beeps

(*) Can only be used for conventional receiver installations

