


INSTRUCTIONS

MARANTEC D382

- 1. Connect the remote with active code to the new remote using the coding connector
- 2. Press and hold the selected channel button on the remote with the active code
- 3. Press and hold the respective channel button on the new remote.
- 4. The light in the remote initially starts blinking and then illuminates continuously after 1-2 sec. Code transfer is completed.

NOTE: For multi-button transmitters, be sure to carry out this procedure for all the buttons you want to use.

Programming connector can be removed and both remotes can now be used to operate the same opener.

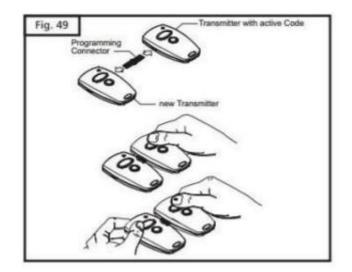

RESETTING CODE:

The remote factory preset code can be changed as follows

Insert the coding connector into remote. Short one of the outer pins of the coding connector with the middle pin Press and hold the respective channel button
The light will blink rapidly for 5 sec Release the button after the light illuminates continuously. Remove the programming connector

- Code will change in approximately 2 seconds
- Release button after the light illuminates continuously. Code further remotes as above