



NICE HSKIT1WFR home Alarm system kit

HSCU1GC control panel:

Safety codes: "factory code", "user code" and "installer code": The control panel has a factory code: "0000" to enable initial access to the programming procedure. This code must subsequently be modified, and the two codes below must be programmed:

- user code: (from 4 to 8 digits) enables activation of the manoeuvres and access to a number of settings;
- installer code: (from 4 to 8 digits) enables access to all settings but not to manoeuvre

Caution!

Do not forget these codes or the control panel will need to be opened (generating a "tamper" alarm), disconnect the power supply and reconnect, then initialise the system after entry of the factory code (this operation does not delete the settings made). After entering the factory code the system requests entry of the current time and date for the internal clock. The internal clock is used in the event log and the timed programme

Vocal message recording procedure:

01. From the menu MESSAGES press OK to confirm: VOCAL MESSAGES is displayed.
02. Press OK again to confirm: VOCAL MESSAGE N°1 is displayed.
03. Select the required message using keys and and press OK to confirm. The text OK TO RECORD is displayed.
04. Press and hold OK and start to record the message. During recording, the remaining recording time is displayed.
05. At the end of recording, release OK. The control panel automatically replays the message.
06. If required, listen to the message again by pressing OK.
07. If recording is successful, press ESC to confirm the recorded message and exit the procedure.
08. If the recording is not satisfactory, press C to cancel and repeat the procedure.

NICE HSDID11- Opening detector:

01. Select the zone to assign the detector to: "Alarm zone A", B, C, D, E, F.
02. Select the detector: touch "Add 1 detector".
03. Fill out all fields (follows: Delay: Touch "Delay" and enter the alarm delay (0 Sec = alarm is sent immediately). This delay gives the user time to enter the home and disarm the alarm without tripping the detector. Confirm with "OK". Name: Touch "Name" and enter the detector's name (e.g.: "kitchen"). Confirm with "OK". Voice name: Touch "Voice name" and record the name of the detector (e.g.: "kitchen").
04. Confirm with "OK".
05. Touch "OK" again and fit the battery into the detector. The control panel beeps to confirm (3 beeps indicate that the detector is already present).
06. Press "OK" to save the settings.

HSTX4 Remote control

Before memorising HSTX4 on the control unit, ensure correct operation by pressing any key and checking that led L1 illuminates at the same time

- Activation - Deactivation - Partial activation of the control unit for zones A + B: set the control unit to perform the procedure for learning HSTX4 (see control unit instruction manual) and press the keys ON and OFF at the same time: 1 beep on the control unit confirms successful programming

- Activation of alarm "panic/illness/burglary" - Activation of receiver: set the control unit/receiver to perform the procedure for learning HSTX4 and press the key for 10 seconds: 1 beep on the control unit confirms successful programming