

INSTRUCTIONS

ONE FOR ALL URC

Locate the number key allocated to your device and brand

Press and hold "SETUP" for 3 seconds, the LED will blink twice

Select the device key (e.g. TV) for the advice type you wish to control

Press and hold the "DIGIT KEY assigned to your brand" e.g. "DIGIT 9" for a Samsung TV until your device switches off

Release the "DIGIT KEY" as soon as your device switches off