



### Push-button programming

1. Press and hold the left button of your original remote control
2. Press briefly the right button, then release both buttons
3. The LEDs will emit a few blinks that will give the code of your remote control
4. The red LED corresponds to the OFF position (programming with dip switches)
5. The green LED corresponds to the ON position (programming with dip switches)

Red LED off/green LED ON



Red LED= "-"

Green LED="+"

Green and red LED= "0"



Push-button programming:



### **Push button coding:**

1. Press and hold the left button of your original remote control
2. Press briefly the right button, then release both buttons
3. The LEDs will emit a few blinks that will give the code of your remote control
4. Press and hold one of the buttons. The two LEDs blink briefly
5. Immediately, program the new remote control by pressing according to the coding on the above figures on the left or right button of your remote control
6. The LEDs blink briefly

### **Dip switch coding:**

1. Place your remote controls in ON or OFF positions according to the above codes
2. Test your new remote control