



### ROGER TX12

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button according to the channel which you want to memorize into the transmitter.
3. When the button is released the relative LED will blink slowly 3 times.
4. During this period press the button on your remote control in which the code is to be stored. A long blink indicates that storage has been successful, while 3 consecutive fast blinks indicate that the code of remote control has already been stored in one channel.
5. 4. The LED will emit another 3 slow blinks while waiting for other storage procedures. If no other codes are transmitted in this time, the receiver exits from the programming phase.
6. It is impossible to store the same code on both channels; each code is associated with just one channel.