

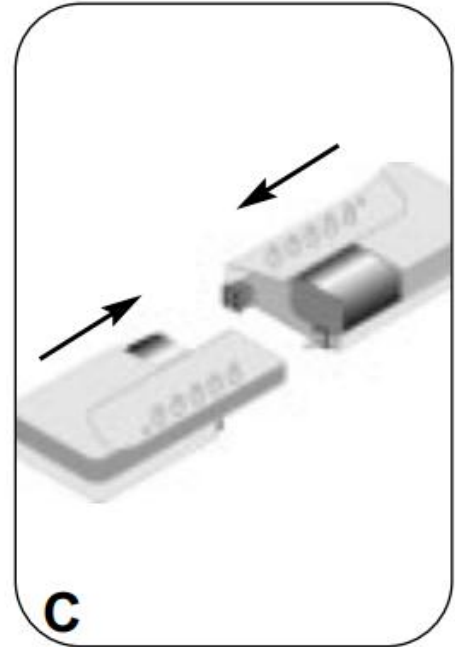


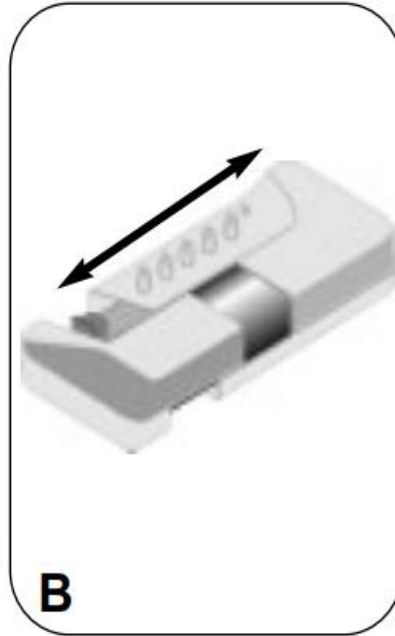

### SOMMER 4004-4050-4025-4011

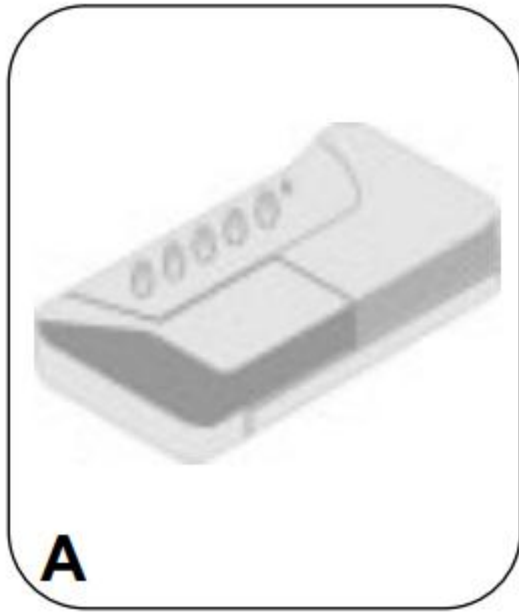

Each new manual remote control first has to be programmed via the door drive / receiver

- Prior to delivery, each door drive/receiver is programmed with a specific code with the result that the manual remote control has to »learn« the code from the door drive/receiver. Each key on the manual remote control (2- or 5-key options) can learn the door drive/ receiver's code (16.7 million possibilities), thus enabling given processes to be controlled.
- Programming the manual remote control - see door drive/receiver instructions • Please note ! Do not press any key on the manual remote control until the LED on the manual remote control has stopped flashing once it has been connected to the door drive/receiver

Code transfer:

- If the manual remote control has been stolen or lost, the code on the door drive/receiver can be transferred up to 16 times (see door drive/receiver instructions). Once the code has been transferred 16 times, it reverts to code 1. Once code transfer has been performed, the manual remote control has to learn the code again

This freshly programmed manual remote control can now pass the code on to other manual remote controls provided that the »teaching« manual remote control has previously been programmed via the door drive/receiver concerned. All other manual controls, however, have to »learn« the code directly from the given door drive/receiver

## Code transfer from manual remote control to manual remote control

1. Open (B) the manual remote controls (A) and connect them up (C) with each other. The LED on the manual remote controls starts to flash. The code can only be learned when the LED stops flashing. Press the desired key on the »teaching« manual remote control until the LED on the »non-teaching« manual remote control stops flashing.
2. Should the LEDs on both manual remote controls flash, then one of the two is not a member of the given user group or the wrong key has been pressed.

## Code transfer from manual remote control to door drive/receiver:

1. If a new door drive/receiver has been installed, it is possible to delete the code of the new door drive/receiver and to have the new door drive/receiver »learn« the code from the manual remote control.
2. To delete the code on the door drive/receiver, press the »Code« key for 20 seconds until such time as the »Radio« LED on the door drive/receiver starts to flash again. Code transfer occurs by connecting the manual remote control and door drive/receiver to each other and pressing the desired key on the manual remote control for 2 seconds. The code is then transferred from the manual remote control to the door drive/receiver