

TAU 250 T4 RP (green light)

- 1. Draw near your gate or door system
- 2. Take your old transmitter, press and hold the first button and press 3 times the second button. Release both buttons
- 3. The LED of your remote control blinks
- 4. Press and hold for 3 seconds the button you normally use for operating your system
- 5. Take your new remote control and keep pressed for 2 seconds the button you want to memorize. Release it
- 6. Your new remote control is now programmed!