



TELECO REMOTE CONTROL

1. Press the button P3 of memorized transmitter, the buzzer in your receiver will emit a continuous beep (fig. 1).
2. Press within 5 seconds a channel which is already present in the memory of the receiver. The buzzer in your receiver will interrupt the sound for 1 sec, and then carry on for approx. 5 seconds (fig. 2).
3. On your new remote control transmit the channel to be memorized. Once memorized the buzzer in your receiver will sound intermittently, release the push button (fig. 3).
4. Your new remote control is now programmed

Fig. 1

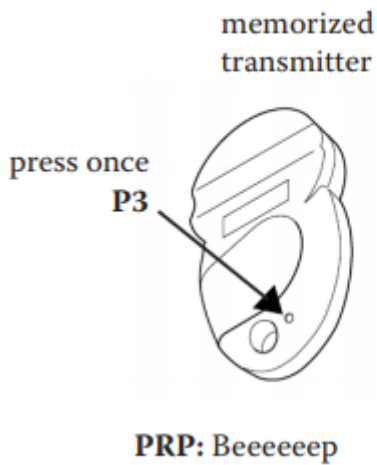


Fig. 2

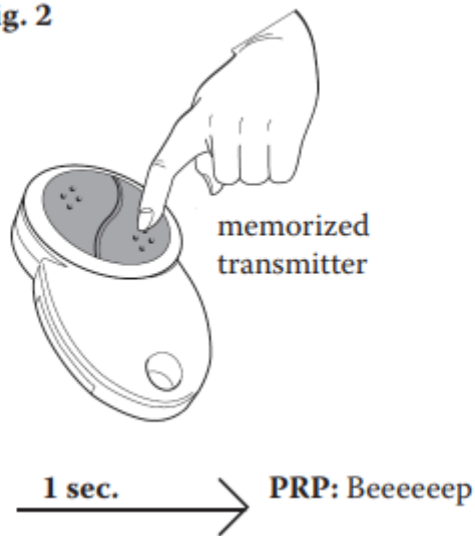


Fig. 3

