



V2 Easy-Lux

PROGRAMMING:

The functions of and times of the control unit are programmed via the configuration menu, which can be accessed and explored using the 2 MENU and SEL keys

- To access the programming menu, press the MENU key until the display shows in 1
- To change the value of this parameter, press the MENU key: the display shows the currently set value (on / off)
- Select the desired value with the SEL key and press the MENU button to save the new value: the display shows in 1 again
- Press the SEL key to select the other parameters to be changed

Using the MENU and SEL keys to select and change the required parameters: in the following pages there is a table with all programming parameters, values selected, DEFAULT values set and a brief description of the function

To exit the programming menu: press the MENU key until the display shows the control panel. If no button is pressed for 30 seconds, the control unit exits programming mode and stores the new parameters.

To exit the programming menu and undo the changes made during the current programming session, press the MENU and SEL keys simultaneously until the display shows the control panel.

To load default data: when the control unit is NOT in programming mode, press the MENU and SEL keys simultaneously until the display shows dEF. With the SEL key, select the default that you want to load and press MENU to confirm.

NOTE: the control unit is supplied with the dEF1 configuration set