



### FAAC KP 868 SLH

To change channel access code.

Simultaneously press and hold buttons 1 & 3. After the three beeps, press and hold buttons 4 & 6. After a further three beeps, enter the programming code (factory default is 12345). After the long beep enter your new 5 digit access code. After two beeps, enter the new code again. A long beep and the lights going out signify that the code has been successfully changed.

To teach a code to a decoder.

Simultaneously press and hold 1 & 3. After the three beeps, hold buttons 1 & 2. After a further three beeps, enter your access code. After the long beep, press and hold the required channel button (1,3 A or B). Also press and hold the learning button on your decoder. After the LED on your decoder stays on steadily, let go of your decoder button and then your keypad button. When the lights have gone off on your keypad, enter your access code, then press the channel button a couple of times and test that the decoder card is recognising the channel.

To teach a code to a transmitter.

Follow the steps above. When you are holding down the required channel button, put your transmitter next to the keypad. Press and hold the required button on your transmitter. The LED on your transmitter will flash twice and go out if it has successfully taken the code.

To take a code from a transmitter.

Press P1 and P2 on your transmitter.

When the LED flashes, let go. Then press and hold the button you want to code to the keypad. Enter your channel access code on your keypad and then press and hold the channel button (1,3,A or B). Successful storage of the code is signified by a double beep and the lights on the keypad going out.

To set keypad as a slave.

Simultaneously press and hold buttons 1 & 3. After the three beeps, press and hold buttons 7 & 9. After a further three beeps enter your programming code. After the long beep, your keypad is now a 'slave'.