

HÖRMANN CTV 1

To set the pin code for each relay the corresponding dip switch needs to be switched to the on position. The user can then enter a three to five digit pin number on the keypad.

Each digit entry will be acknowledged with a short beep and short flash of the red indicator LED.

The dip switch can then be set back to the off position.

To activate the corresponding relay and operate the door the user can then enter the pin number followed by the 'key' symbol on the keypad

After this the new code followed by pressing the [Key] button will operate the door. Test the function.