



ALLO
REMOTECONTROL

INSTRUCTIONS

SIMU HZ

Programming the Transmitter:

Hold the transmitter within 10 feet of the motor head
Press and hold the Program Button (about 1 second) until the motor jogs forward and back
Transmitter range will now be approximately 100 ft.
You can now proceed to the up and down limit settings.

Disconnect the Power to Motor:

After the above steps are completed, disconnect the power to the motor.
Proceed to the next motor using these same steps listed above with the same transmitter switch.

Connect the Power to Motor:

Once all the motors are completely programmed and limits are set. Reconnect the power to all the motors.

Wall mounting:

Mount the bracket on the wall
Put the Hz remote control in its wall bracket

Visit our website: www.Alloremotecontrol.com