

## SUPERIOR AIRCO

### CODE SET UP BY BRAND:

1. Find your code in the code table, for each brand if the chosen code does not operate your equipment, try the second code and continue until your equipment works correctly. For instance for "AUCMA", you can choose code 0288, if it does not work, please try code 0289
2. Point your remote control at the air conditioner
3. Press "SELECT" key, the displayed code flashes
4. Enter 4 digit codes. For instance in order to enter code 0288, press "0", when "0" stops flashing, press "2", "2" stops flashing, press "8", "8" stops flashing, press the last "8", "8" stops flashing, ending the code input, setting is finished
5. Point at the air conditioner, press "one key", check if it works, if not, try another group until it works

### AUTOMATIC SEARCH:

If the required brand is not listed in the code table, please operate as per following steps:

1. Point at your air conditioner, press the "SELECT" key for 5 seconds and then release it, remote control enters the auto-search status, the code number flashes and code increases. When the air conditioner receives the signal, and sends one buzzer, press any key to confirm
2. Try other function keys, if they do not work, repeat above steps until it works properly

### NOTE:

1. If you are not planning to use your new Superior remote control remove the batteries to avoid leakage.
  2. When the display looks dim, please change batteries. After the batteries are replaced set-up is not required again.
  3. Check carefully that there are no objects between your new remote control and the air conditioner.
- Mind that timer is effective only when the air conditioner receives the timer on/off signal from the remote control