


Manual

How to Programme your NEW ECOSTAR REMOTE CONTROL

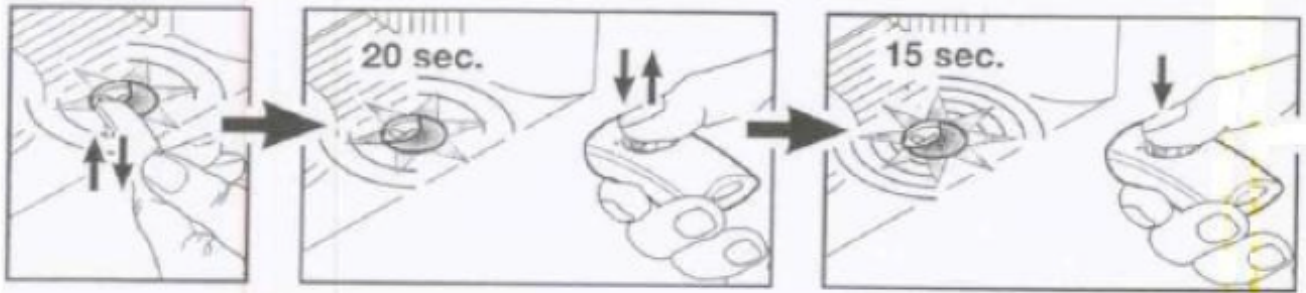

- [How to program your new remote:](#)

(You can program 6 RSE 2 maxi remotes with your ECOSTAR)

- Briefly press the small transparent button "P" located on the underside of your ECOSTAR motor.

You have 20 seconds to program your new remote (the light underneath the button "P" flashes slowly)

NB : If the light on the motor was lit, it will got out when you enter programming mode

- Briefly press one button on the new remote. The light will flash more quickly.

- Hold down the same button on the new remote. The light will flash very quickly. Release the button.

- Test your new remote

DELETING ALL REMOTES

To delete all the remotes previously registered, hold down the small button "P" for more than 5 seconds. The light will flash slowly for 1 second, then faster for 4 seconds and then very quickly for 2 seconds, indicating that all remotes have been successfully deleted.