




BECKER SWC441

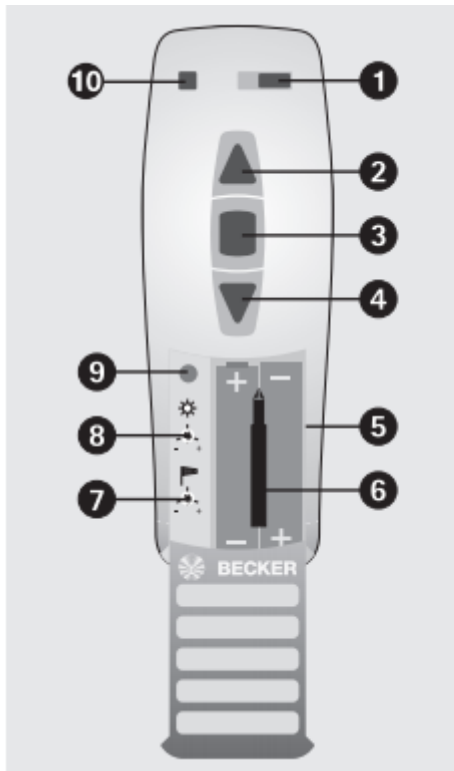

- ① Sliding Switch
- ② RETRACT button
- ③ STOP pushbutton
- ④ EXTEND button
- ⑤ Battery compartment
- ⑥ Setting aid
- ⑦ Wind threshold control switch
- ⑧ Sun threshold control switch
- ⑨ Programming pushbutton
- ⑩ Transmission control light

Before programming the radio, check if the threshold actuator is set on factory setting. When Programming the transmitter, make sure you are not close to the operating area of the sun protection system.

Programming with the receiver:

Switch off the receiver's power supply and reconnect after 5 seconds OR activate the 'learn' button or the radio controlled receiver switch.

The receiver will be then in learn mode after 3 minutes

When the receiver is in learn mode, press the learn button until it indicates that the learn process has been successfully completed.